

Quick Start Guide

S1 - Shielder Wearable

PACKAGE CONTENT

- Wearable device
- Quick start guide

DEVICE LAYOUT




Power Button



Light Indicator

CHARGING THE DEVICE

- Remove the rubber wristband by pulling off the wristband from the power button side.
- Insert the wristband USB into any USB port with the metal gold strips touching the single centre slot of the port.
- While plugged in, you will see a constant red light which means it's charging.
- No constant red light means it's fully charged.

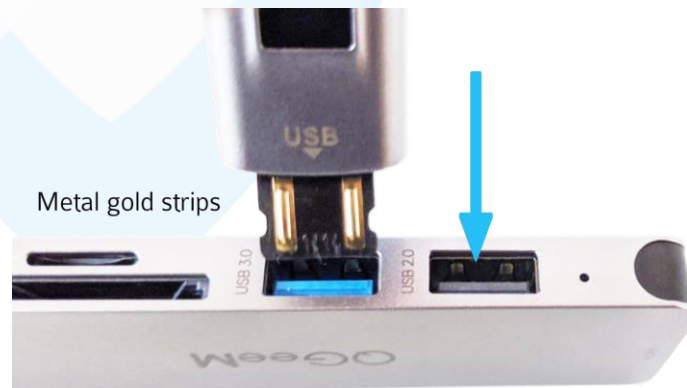

USING THE DEVICE

- Switch on the device by tapping and holding the power button for more than 3 seconds until you see three red beeps from the light indicator.
- Use the SHIELD app to synchronize & onboard with the wearable.
- To switch off the device, tap and hold the power button for more than 3 seconds until you see one long red beep from the light indicator.

WARNINGS

- The device can be used in locations with an ambient temperature of 0 to 35°C. You can store the device of -20 ~ +30°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not allow children below age 6 or animals to chew or suck the device.
- Do not use your device in a hot environment or near fire.


DEVICE CHARACTERISTICS


Battery	Lithium battery, 80mAh 3.7V
Net Weight	24.8g including battery
Size	40.89 x 20.18 x 12mm
Operating Temperature	-20 ~ +60°C
Storage Temperature	-20 ~ +30°C
Waterproof Level	IP67 Rating - Devices are splash and water resistant but not waterproof. Acceptable examples are during exercise (exposure to sweat is OK), in the rain, washing your hands and light showers.
Manufacturer	MOKO Technology Limited



This marking on the product should not be disposed with other household waste.
No user serviceable parts
Terms & Conditions: <https://shieldforschools.com/>

 **Fimatix UK Ltd**

 shieldsupport@fimatix.com

 0208 0650 332